


GMS 8.0 Tutorial

MODFLOW – Automated Parameter Estimation

Model calibration with PEST

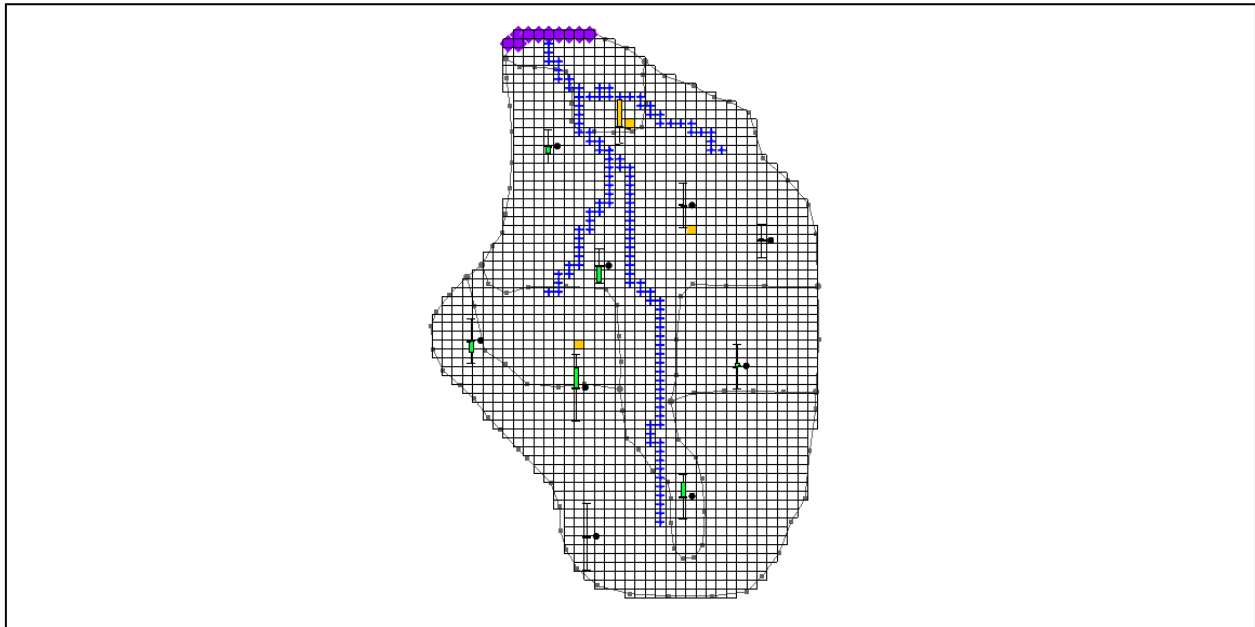

Objectives

Learn how to calibrate a MODFLOW model using PEST.

Prerequisite Tutorials

- MODFLOW - Model Calibration

Required Components

- Grid
- Map
- MODFLOW
- Inverse Modeling

Time

- 30-60 minutes

1 Contents

1	Contents	2
2	Introduction	2
2.1	Outline	2
2.2	Required Modules/Interfaces	3
3	Description of Problem	3
4	Getting Started	3
5	Reading in the Project	3
6	Model Parameterization	4
7	Defining the Parameter Zones	4
7.1	Setting up the Hydraulic Conductivity Zones	4
7.2	Setting up the Recharge Zones	5
7.3	Mapping the Key Values to the Grid Cells	6
8	Selecting the Parameter Estimation Option	6
9	Starting Head	7
10	Editing the Parameter Data	7
11	Max. Iterations	8
12	Saving the Project and Running PEST	8
13	Viewing the Solution	9
14	Loading Optimal Parameter Values	9
15	Viewing Parameter Sensitivities	10
16	Conclusion	11

2 Introduction

The *MODFLOW-Model Calibration* tutorial describes the basic calibration tools provided in GMS. It illustrates how head levels from observation wells and observed flows from streams can be entered into GMS and how these data can be compared to model computed values. It also describes how a trial and error method can be used to iteratively adjust model parameters until the model computed values match the field observed values to an acceptable level of agreement.

In many cases, calibration can be achieved much more rapidly with an inverse model. An inverse model is a utility that automates the parameter estimation process. The inverse model systematically adjusts a user-defined set of input parameters until the difference between the computed and observed values is minimized.

GMS contains an interface to an inverse model called PEST and this tutorial illustrates how to calibrate a MODFLOW model using PEST. Since this tutorial assumes you understand how to enter field observed values, you should complete the *MODFLOW-Model Calibration* tutorial, prior to beginning this tutorial.

2.1 Outline

This is what you will do:

1. Open a MODFLOW model and solution.
2. Define conditions.
3. Run PEST.
4. Load optimal parameter values.

2.2 Required Modules/Interfaces

You will need the following components enabled to complete this tutorial:

- Grid
- Map
- MODFLOW
- Inverse Modeling

You can see if these components are enabled by selecting the *Help | Register* command.

3 Description of Problem

The model we will be calibrating in this tutorial is the same model featured in the *MODFLOW-Model Calibration* tutorial. The model includes observed flow data for the stream and observed heads at a set of scattered observation wells. The conceptual model for the site consists of a set of recharge and hydraulic conductivity zones. These zones will be marked as parameters and an inverse model will be used to find a set of recharge and hydraulic conductivity values that minimize the calibration error.

4 Getting Started

Let's get started.

1. If necessary, launch GMS. If GMS is already running, select the *File | New* command to ensure that the program settings are restored to their default state.

5 Reading in the Project

First, we will read in the modeling project:

1. Select the *Open* button .
2. Locate and open the **tutfiles\MODFLOW\inverse** directory.

3. Open the file entitled **bigval.gpr**.

You should see a MODFLOW model with a solution and a set of map coverages. Three of the coverages are the source/sink, recharge, and hydraulic conductivity coverages used to define the conceptual model. The active coverage contains a set of observed head values from observation wells. If you switch to the source/sink coverage, you will notice that an observed flow value has been assigned to the stream network.

6 Model Parameterization

The first step in setting up the inverse model is to “parameterize” the input. This involves identifying which parts of the model input we want the inverse model utility to optimize. There are two approaches for parameterization, zonal and pilot points. The tutorial entitled “MODFLOW – Pest Pilot Points” covers the pilot point approach. In this tutorial we will use the zonal approach. This involves identifying polygonal zones of hydraulic conductivity and recharge, marking the zones as parameters, and assigning a starting value for each zone. PEST will then adjust the K or recharge values assigned to the zones as it attempts to minimize the residual error between computed vs. observed heads and flows.

7 Defining the Parameter Zones

For our first attempt at parameter estimation, we will define a set of parameter zones. The conceptual model approach utilized in GMS is ideally suited for this task since the conceptual model consists of recharge and K zones defined with polygons. We will mark the polygons as parameter zones by assigning a “key value” to each polygon. The key value should be a value that is not expected to occur elsewhere in the MODFLOW input file. A negative value typically works well.

We will use seven parameter zones consisting of four hydraulic conductivity zones and three recharge zones. The number of observations is eleven, consisting of ten observation wells and one stream flow value. Note that the number of parameters being estimated should always be less than the number of observations when you are using parameter zones.

7.1 Setting up the Hydraulic Conductivity Zones

First we will set up the hydraulic conductivity zones. The hydraulic conductivity polygons are shown in Figure 1. The five polygons will be used to define four parameter zones. The key values associated with each of the four zones are shown on the polygons in the figure.

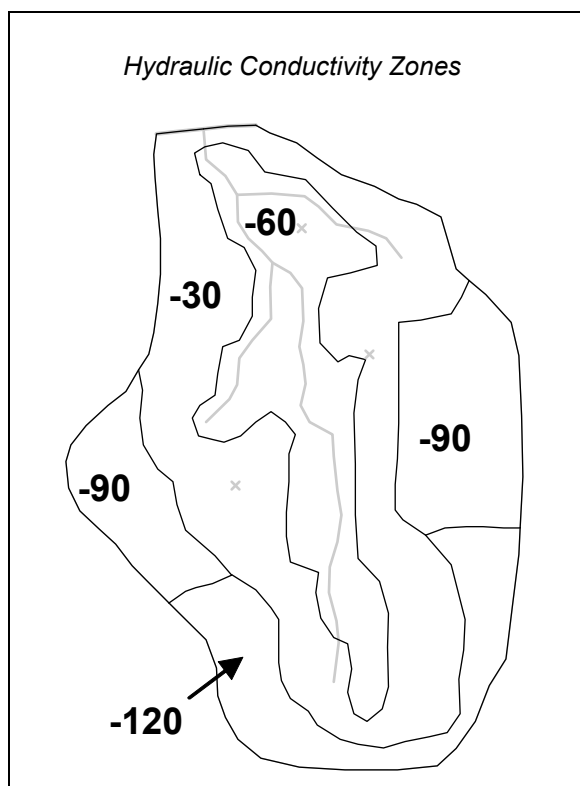





Figure 1. Hydraulic conductivity zones and parameter key values.

To assign the key values to the polygons:

1. Expand the *BigVal* conceptual model  by clicking the plus symbol next to it in the *Project Explorer*.
2. Switch to the *Hydraulic Conductivity* coverage  by selecting it from the *Project Explorer*.
3. Select the *Select Polygons* tool .
4. Double click on each of the polygons shown in Figure 1 and assign the appropriate key value to the *Horizontal K* input field.

7.2 Setting up the Recharge Zones

Next, we will set up the recharge zones. The recharge polygons are shown in Figure 2. The five polygons will be used to define four parameter zones. The polygon at the top end of the model is relatively small, it is isolated from the majority of the observation wells, and it is down gradient from the wells. As a result, it is not a good candidate for parameter estimation. We will fix the recharge in this zone at zero. The key values will be associated with the other four polygons to define three parameter zones as shown.

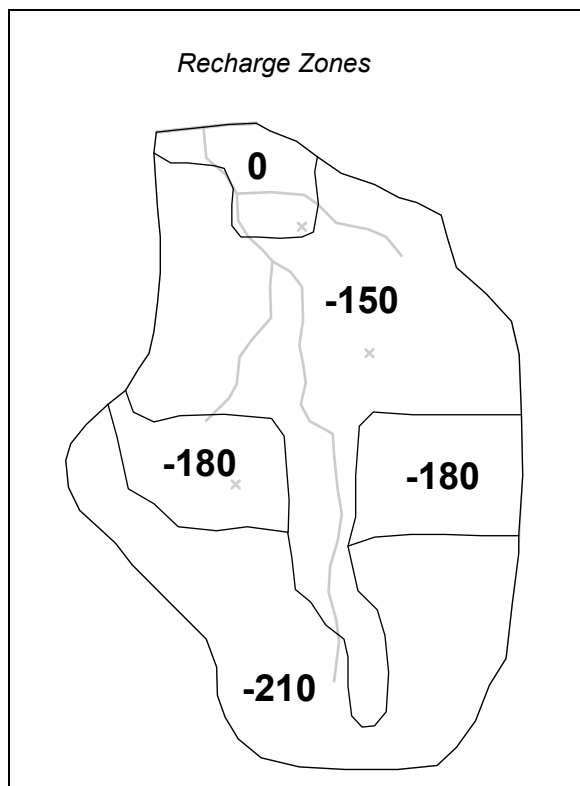



Figure 2. Recharge zones and parameter key values.

To assign the key values to the polygons:

1. Switch to the *Recharge* coverage  by selecting it from the *Project Explorer*.
2. Double click on each of the polygons shown in the previous figure and assign the appropriate key value to the *Recharge rate* input field.

7.3 Mapping the Key Values to the Grid Cells

Once the key values are assigned to the polygons, they must be mapped to the cells in the MODFLOW grid.

1. Select the *Feature Objects* | *Map* → *MODFLOW* command.
2. Select *OK* at the prompt.

8 Selecting the Parameter Estimation Option



Before we edit the parameter data, we will turn on the *Parameter Estimation* option. This option is turned on in the *Global Options* dialog.

3. Select the *3D Grid Data* folder  in the *Project Explorer*.

4. Select the *MODFLOW | Global Options* command.
5. Select the *Parameter Estimation* option in the *Run options* section of the dialog.

9 Starting Head

The head contours currently displayed on the grid are from a forward run of a MODFLOW simulation using the starting parameter values. Before running PEST, we will copy the computed heads to the Starting Heads array. This will ensure that each time PEST runs MODFLOW, the starting head values will be reasonably close to the final head values and MODFLOW should converge quickly.

1. Select the *Starting Heads* button.
2. Select the *3D Data Set → Grid* command.
3. Expand the *bigval (MODFLOW)*  folder if necessary.
4. Select the **Head** data set  under the *bigval (MODFLOW)* folder and click *OK*.
5. Select the *OK* button to exit the *Starting Head* dialog.
6. Select the *OK* button to exit the *Global Options* dialog.

10 Editing the Parameter Data

Next, we will create a list of parameters and enter a starting, minimum, and maximum value for each.

1. Select the *MODFLOW | Parameters* command.

The *Parameters* section of this dialog is used to manage a list of the parameters used by the inverse model. The *New* button can be used to create a set of parameters one at a time. Each parameter has several properties, including a name, a key value, a type, a starting value, a minimum value, a maximum value, a usage field, and a log-transform field. Rather than creating each parameter one at a time, in most cases the parameter list can be automatically generated by GMS using the *Initialize From Model* button. When this button is selected, GMS searches the MODFLOW input data for likely key values and creates a list of parameters. If a parameter is not automatically found by GMS, it can be added using the *New Parameter* button.

2. Select the *Initialize from Model* button.

Note that all seven parameters were automatically found. Also note that the parameters have been given a default name. The next step is to enter a starting, minimum, and maximum value for each parameter. Special care should be taken when selecting the starting values. In most cases, using arbitrary starting values will cause the inverse model to fail to converge. The closer the starting values are to the final parameter values, the

greater the chance that the inverse model will converge. The starting values we will use were found after a few iterations of manual (trial and error) calibration.

- For each parameter check **on** the *Param. Est. Solve* toggle.
- Enter the following data into the parameters spreadsheet:

Name	Value	Min Value	Max Value
HK_30	1.2	0.003	30
HK_60	2.4	0.003	30
HK_90	0.6	0.003	30
HK_120	0.2	0.003	30
RCH_150	0.0001	1e-10	0.0001
RCH_180	0.00008	1e-10	0.0001
RCH_210	0.00006	1e-10	0.0001

- Ensure that the *Log Xform* option is turned **on** for each of the hydraulic conductivity parameters.
- Select *OK* to exit the dialog.


11 Max. Iterations

Finally, we will increase the maximum number of iterations used by the solver package. This will increase the likelihood that MODFLOW will converge at each iteration.

- Select the *MODFLOW | PCG2 Package* command.
- Change *MXITER. Maximum number of outer iterations* to **100** and *ITER1. Number of inner iterations* to **100**.
- Select the *OK* button.

12 Saving the Project and Running PEST

We are now ready to save the project and run PEST.

- Select the *File | Save As* command.
- Save the project with the name **mfpest_zones.gpr**.
- Select the  *Run MODFLOW* button.

PEST is now running. The spreadsheet in the top-right-hand corner of the dialog shows the error and the parameter values for each iteration of the parameter estimation process. The plot on the left shows the error for each iteration. When PEST is finished running you can view the optimum parameter values in the spreadsheet. Once PEST has found the optimum parameter values MODFLOW will run a forward run with the optimum values and output the head solution. This will be the solution that we read in.




Note: If you have room on your screen, you may wish to resize the output window by dragging the handle in the lower right corner of the window.

13 Viewing the Solution

Once MODFLOW is done running you can read in the solution.

1. Make sure that the *Read solution on exit* toggle is checked and select the *Close* button.

The contours currently shown on the 3D grid are the heads from the MODFLOW run with the optimum parameter values. We will now look at the observation targets in the map module and the error associated with this model run.

2. Select the *Observation Wells* coverage . Notice that the residual error has been greatly reduced for all monitoring wells.
3. Select the *Sources & Sinks* coverage  from the *Project Explorer*. Notice that the observation target (located near the top of the stream) shows very little residual error.
4. Select the *Select Arc Group* tool .
5. Select the arc group by clicking on a river arc. Notice in the edit strip at the bottom of the graphics window the computed and observed flow is reported.

Next, we will look at some global error norms.


6. Right-click on the **mfpest_zones (MODFLOW)** solution  in the *Project Explorer* and select the *Properties* command.

This command brings up a spreadsheet showing the residual error (computed – observed) from this model run. The spreadsheet shows the error from the head observations, the flow observations, and the combined weighted observations. You may wish to compare the values from this run to the *bigval* MODFLOW solution.

7. Select the *Done* button to exit the dialog.

14 Loading Optimal Parameter Values

When you are finished using the inverse model it is often desirable to load and view the optimal parameter values. We will now load the optimal parameters.

1. Select the *3D Grid Data* folder  in the *Project Explorer*.
2. Select the *MODFLOW | Parameters* command.
3. Select the *Import Optimal Values* button.


4. Select the **mfpest_zones.par** file and select the *Open* button.

Notice that the starting value for all of the parameters has now been changed to the optimal value computed by the inverse model.

5. Select the *OK* button to exit the dialog.

15 Viewing Parameter Sensitivities

In addition to computing the optimal parameter values, PEST will compute the sensitivities of each parameter. This information is printed to the *.sen file at each parameter estimation iteration. GMS will create a plot of this information using the plot wizard.

1. Select the *Plot Wizard* button .
2. Select the *Parameter Sensitivities* plot.
3. Select the *Next* button.
4. Select the *Finish* button.

Your plot should be similar to the one shown below.

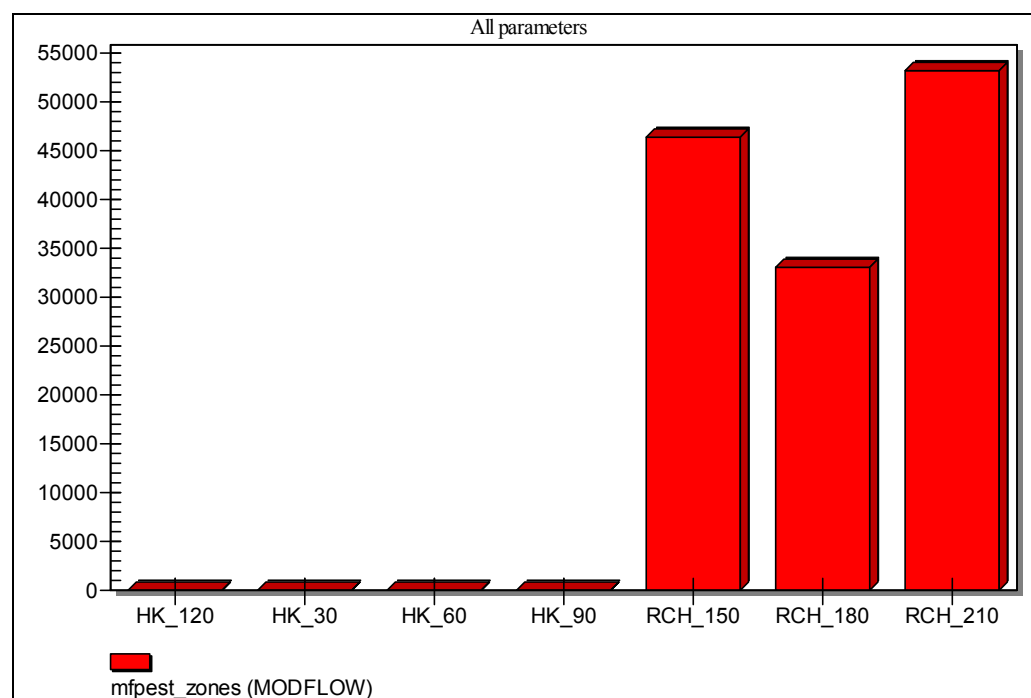


Figure 3. Parameter sensitivity plot.

Notice that the sensitivity for the **RCH** parameters is much greater than the **HK** parameters. For a more in depth explanation of the calculations used to create this file,

the user is referred to the PEST documentation (section 5.3.2 of the PEST Manual). The parameter sensitivity information is useful in identifying the parameters that have the greatest effect on the model and those parameters that have a little or no effect on the model. The user may wish to remove or hold constant the “insensitive” parameters in another PEST model run.

16 Conclusion

This concludes the *MODFLOW* - Automated Parameter Estimation tutorial. Here are the things that you should have learned in this tutorial:

- You can use the zonal approach or the pilot point approach with PEST. When using pilot points you may have more parameters than observations because regularization is included in the parameter estimation.
- When PEST finishes, the solution imported into GMS corresponds to the optimal input values. However, the input values in GMS are still the starting values. You must use the *Import Optimal Values* button to replace the starting values with the optimal values.
- You can view the parameter sensitivities by creating a Sensitivity plot using the plot wizard.